

# K8204


## Z AXIS UPGRADE ROD AND COUPLER

UPGRADE DRAADSTANG EN KOPPELSTUK VOOR Z-AS  
UPGRADE TIGE ET COUPLEUR POUR AXE Z  
UPGRADE DER Z-GEWINDETRIEBE UND DES VERBINDUNGSSTÜCK  
ACTUALIZACIÓN DE LA BARRA DEL EJE Z Y EL ACOPLADOR

STEP  
1





**REMOVE THE UPPER AXE HOLDER SCREW, REMOVE THE BEARING ASSEMBLY** • VERWIJDER DE BOVENSTE ASHOUDERSCHROEF EN VERVOLGENS DE LAGERING • RETIRER LA VIS DE SUPPORT DE L'AXE SUPÉRIEURE ET ENSUITE LE COUSSINET • LOCKERN SIE DIE BEFESTIGUNGSSCHRAUBE DER OBEREN AXHSE. ENTFERNEN SIE DANACH DAS KUGELLAGER • QUITTE EL TORNILLO DE FIJACIÓN DEL EJE SUPERIOR. LUEGO, QUITTE EL COJINETE

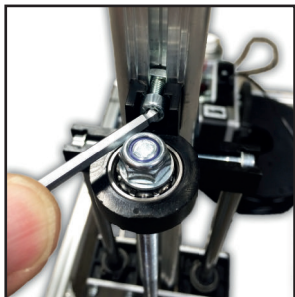

STEP  
2




**REMOVE THE FOLLOWER NUT HOLDER AND UNSCREW THE NUT (MAKE SURE TO SUPPORT THE Z AXIS !!)** • VERWIJDER DE BOUTENHOUDER VAN DE VOLGER EN SCHROEF DE BOUT LOS (ZORG ERVOOR DAT DE Z-AS ONDERSTEUND IS !!) • RRETIRER LE PORTE-ÉCROU DU SUIVEUR ET DÉVISSER L'ÉCROU (S'ASSURER QUE L'AXE Z EST SUPPORTÉ !!) • ENTFERNEN SIE DIE HALTERUNG DER MUTTER UND SCHRAUBEN SIE DIESE LOS (BEACHTEN SIE, DASS DIE Z-ACHSE FESTSITZT!) • QUITTE EL SOPORTE DE LA TUERCA Y DESATORNILLELO (¡ASEGÚRESE DE QUE EL EJE Z ESTÉ SUJETO!)

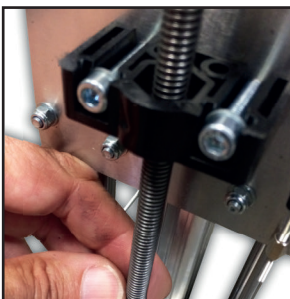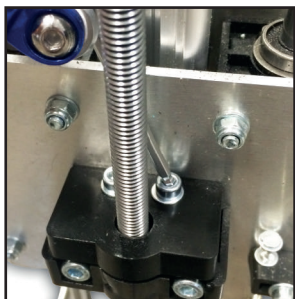

STEP  
3





**REMOVE THE Z AXIS COUPLER** • VERWIJDER DE Z-AS-KOPPELING • RETIRE LE COUPLAGE DE L'AXE Z • ENTFERNEN SIE DAS VERBINDUNGSSTÜCK DER Z-ACHSE • QUITTE EL ACOPLADOR DEL EJE Z

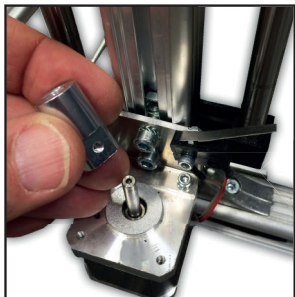

STEP  
4






**MOUNT THE NEW Z AXIS COUPLER AND MOUNT THE NEW Z AXIS** • MONTEER DE NIEUWE Z-AS-KOPPELING EN VERVOLGENS DE NIEUWE Z-AS  
• MONTER LE NOUVEAU COUPLMENT DE L'AXE Z ET ENSUITE LE NOUVEL AXE Z • INSTALLIEREN SIE DAS NEUE VERBINDUNGSSTÜCK DER Z-ACHSE  
UND DIE NEUE Z-ACHSE • INSTALE EL NUEVO ACOPLADOR DEL EJE Z Y EL NUEVO EJE Z

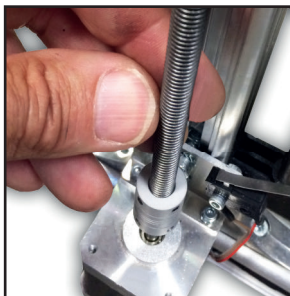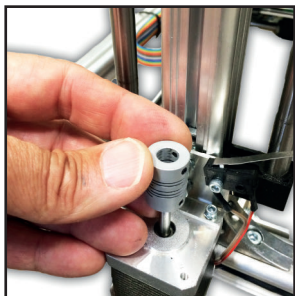

STEP  
5



**MOUNT THE NEW Z AXIS FOLLOWER AND SECURE USING 2 SCREWS (REUSE SCREWS FROM STEP 2)** • MONTEER DE NIEUWE Z-AS  
VOLGER EN ZET HEM VAST MET 2 SCHROEVEN (GEBRUIK HIERVOOR DE SCHROEVEN UIT STAP 2) • MONTER LE NOUVEAU SUIVEUR DE L'AXE Z ET LE  
FIXER AVEC DEUX VIS (RÉUTILISER LES VIS DE L'ÉTAPE 2) • INSTALLIEREN SIE DIE NEUE Z-HALTERUNG UND BEFESTIGEN SIE DIESE MIT 2 SCHRAUBEN  
(VERWENDEN SIE DIE SCHRAUBEN VON SCHRITT 2) • INSTALE EL NUEVO SOPORTE DEL EJE Z Y FIJELO CON 2 TORNILLOS (VUELVA A UTILIZAR LOS  
TORNILLOS DEL PASO 2)

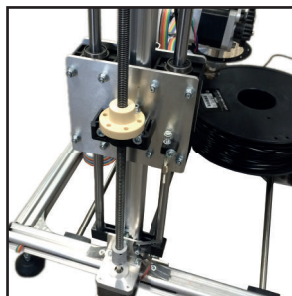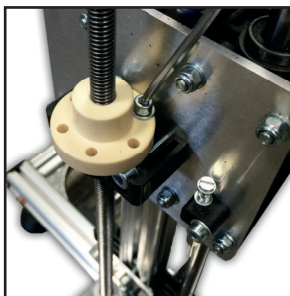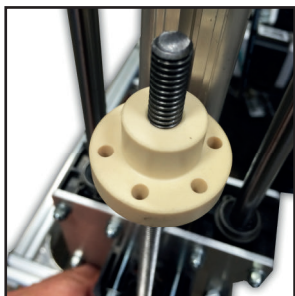

**DONE** • KLAAR • TERMINÉ • FERTIG • LISTO

STEP  
6



**INSTALL THE NEW MARLIN FIRMWARE K8204** • INSTALLEER DE NIEUWE MARLIN FIRMWARE K8204 • INSTALLER LE NOUVEAU MARLIN FIRMWARE  
K8204 • INSTALLIEREN SIE DIE NEUE MARLIN FIRMWARE K8204 • INSTALE EL NUEVO FIRMWARE MARLIN K8204



[HTTP://WWW.K8200.EU/SUPPORT/DOWNLOADS/](http://www.k8200.eu/support/downloads/)

